

# T estpassport Q&A



---

*La meilleure qualité le meilleur service*

<http://www.testpassport.fr>

Service de mise à jour gratuit pendant un an

**Exam : DES-4421**

**Title : Specialist - Implementation  
Engineer, PowerEdge MX  
Modular Exam**

**Version : DEMO**

1.A new administrator has just taken over an MX7000 Multi-Chassis Management Group and two-racks of PowerEdge servers. The previous administrator no longer works at the company and is not available. No one knows the password for the OME-M interface and the default password is not working.

What must be used to reset the password?

- A. iDRAC for one of the compute sleds.
- B. Left ear control panel.
- C. RACADM using a serial connection
- D. Management Module jumpers

**Answer: D**

**Explanation:**

Reference:

[https://www.dell.com/support/manuals/us/en/04/poweredge-mx7000/omem1.00.01\\_ug/recovering-passwords?guid=guid-553bf2dd-c491-4117-85f5-c2fbfde4ef12&lang=en-us](https://www.dell.com/support/manuals/us/en/04/poweredge-mx7000/omem1.00.01_ug/recovering-passwords?guid=guid-553bf2dd-c491-4117-85f5-c2fbfde4ef12&lang=en-us)

2.A server sled has a single mezzanine card installed in the correctly supported slot.

To which IOM fabric(s) does the sled have access?

- A. Fabric A1 and Fabric A2
- B. Fabric A1 only
- C. Either Fabric A or Fabric B, depending on the configuration set in OME-M
- D. Fabric A1 and Fabric B1

**Answer: B**

**Explanation:**

Reference:

[https://i.dell.com/sites/csdocuments/Product\\_Docs/en/dell\\_emc\\_poweredge\\_mx7000\\_technical\\_guide.pdf](https://i.dell.com/sites/csdocuments/Product_Docs/en/dell_emc_poweredge_mx7000_technical_guide.pdf)

3.When performing “A1 the Box” management, what must be done to successfully connect to the Management Module?

- A. Configure PuTTY for a serial connection
- B. Change the baud rate to 128000
- C. Connect cables to the KVM
- D. Attach standard A-to-A USB cable to a laptop

**Answer: A**

4.What is the number of server-facing ports and the bandwidth of each port on the MXG610s? (Choose two.)

- A. 8x 16 Gbps
- B. 16x 32 Gbps
- C. 16x 16 Gbps
- D. 8x 32 Gbps

**Answer: BC**

**Explanation:**

Reference:

[https://i.dell.com/sites/csdocuments/Product\\_Docs/en/DellEMCNetworkingMXG610sSpecSheet.pdf](https://i.dell.com/sites/csdocuments/Product_Docs/en/DellEMCNetworkingMXG610sSpecSheet.pdf)

(page 1)

5.What can be used as the firmware update source for OME-M within an MX chassis?

- A. Server Update Utility Baseline from a Catalog
- B. Server Update Utility System Live Image (SLI)
- C. Dell Update package System Live Image (SLI)
- D. Dell Update Package Baseline from a Catalog

**Answer:** D

**Explanation:**

Reference: [https://topics-cdn.dell.com/pdf/openmanage-enterprise-modular-v10001-poweredge-mx7000\\_users-guide4\\_en-us.pdf](https://topics-cdn.dell.com/pdf/openmanage-enterprise-modular-v10001-poweredge-mx7000_users-guide4_en-us.pdf)